

Index

- 2**
2D spectrum level 62
- 3**
3DSS display level 62
- A**
AESS 8
AFSK RTTY 26
AFSK RTTY from PC program 26
AGC 76
AGC Soft key 121
ANT connector 173
Antenna tuner 88, 159
APF filter and Auto Tune 23
ATAS 120A antenna 107, 145, 146
ATAS-120A antenna 89
ATT attenuators 76, 119
Audio Codec 39
Author 198
- B**
Back-up memory channels 68
Back-up radio configuration 68
BAND button 74
Band Master 46
Band stack 75
Band switching (Amp or Tuner) 172
Before you update the firmware... 70, 71
BPSK and QPSK compared 32
Break-in 21, 88
- C**
Carrier point 63
CAT settings 42, 146
CENTER 63
CENTER display 115
Checking installed firmware revision . 69
Colour choice 61
COM Port settings in PC software 42
Computer mouse operation 102
Contest number 25, 144
Conventions 2
Cooling fan 173
CURSOR 63
CURSOR display 115
CW APF filter 94
CW Break-in setting 95
CW key speed and pitch 96
CW keying from an external program 24
CW memories 144
CW memory (MESSAGE method) 25
CW memory (TEXT method) 25
CW message keyer 21, 22, 96
CW Settings menu 140
CW sidetone 22, 96
CW sidetone but no transmit 182
CW Skimmer 46
- D**
DC input jack 173
Digital Master (DM780) 58
Display your callsign 10
DM780 58
DNF digital notch filter 80, 120
Driver software 37
DX Windows 86
- E**
Expand Soft Key 60
EXT speaker jack 173
Extension settings menu 157
External antenna tuner 89
External Display 176
- F**
FC-40 external tuner 89
FH-2 keypad 173
Filter function display 111
Firmware update Yaesu website 69
Firmware updates 69
FIX 64
FIX display 116
FM repeater operation 99
FM split 100
FM-N and FM modes 102
Formatting the SD card 67
Frequency display 112

Front panel connectors	168	Meter	111
Front panel controls	159	MHz digits	112
FSK RTTY	28	Mic Jack	168
FT8 preset.....	34	MIC scan	148
FUNC button.....	160	Microphone	168
Function menu	122	MixW	55
G		MMTTY	53
Getting ready for digital modes	33	MODE button.....	72
Glossary	185	MONI transmit monitor	91
GND	171	Morse code prosigns	25
H		Morse keys.....	20
Ham Radio Deluxe	58	MOX	90
Headphone jack.....	168	MRP40	60
HRD.....	58	N	
Hz digits	112	N1MM Logger+	44
I		NB (Noise Blanker).....	167
IPO	76	No audio to digital modes program..	180
J		NOR, REV, RTTY-L, and RTTY-U	29
JS8Call.....	50	NR (Digital Noise Reduction)	161
K		O	
Key.....	174	OmniRig	46
Keyer message macros	102	Onboard RTTY operation	30
Keyer settings.....	21	Operating CW mode	94
Keyer type	143	Operating Split.....	96
Keying speed and pitch	21	Operation settings menu	145
kHz digits	112	P	
L		Parametric Equalizer (Transmit)	17
LED brightness	114, 154	Phone Jack	168
Limiting the tuning range	105	PMS to limit the tuning range.....	105
Linear amp power - digital modes.....	66	Poor CAT control of WSJT-X.....	177
Linear amplifier	65	Power button.....	159
Linear amplifier ALC level	65	Preset for RTTY	29
Linear amplifier connections	65	PRESET mode	34
Lower Spectrum Scope Soft Keys	115	PSK from an external PC program	30
M		Q	
Main AF and RF/SqI	164	QMB (Quick Memory Bank).....	146, 163
Markers	63	R	
Mem Group	147	Radio settings for SSB voice.....	41
Memory channels for FM	101	Radio settings menu	128
Memory groups.....	109	RBW (Resolution bandwidth)	63
		Rear panel connectors	171
		Reference Oscillator Fine Adjust	183

REM	173
Repeater Tone	100
Reset.....	158, 178
RF gain and squelch	77
RF/SQL	77
RTTY Mark and Shift	28
RTTY polarity settings	29

S

S meter stuck	180
SCAN mode	103
Screen capture.....	67
Screen saver	177
Screenshot.....	74
Screenshot picture	67
SD card.....	66
SD Card slot	169
Select a different Preset	35
Serial numbers.....	177
Setting the time and date.....	10, 157
Setting up a USB connection	36
Setting up PC digital mode software ..	44
Setting up the radio.....	10
Setting up the radio for CW.....	20
Setting up the radio for PSK	30
Setting up the radio for RTTY	26
Setting up the radio for SSB.....	11
Spectrum and waterfall display...60, 113	
Spectrum scope menu settings	63
Spectrum to waterfall display ratio	60
Speech processor	14, 92
SSB operation	75
Stop a message being sent	26

T

Technical features	6
The problem with the FIX display	116
Touchscreen calibration	158
Touchscreen display functions	111
Transceiver stuck in transmit	181
Transmitted bandwidth.....	16

Transmitter clarifier	91
Transmitting.....	85
Troubleshooting.....	177
Tune button	159
Tuning CW.....	94
Tuning rates	112
Typical test setup	11

U

UP and DWN buttons.....	148
Updating the firmware	70, 71
Upper spectrum Scope settings.....	119
USB cable settings DATA & PSK	41
USB cable settings for the CW mode..	40
USB cable settings for the PSK mode..	41
USB cable settings for the RTTY mode	41
USB keyboard	176
USB mouse and keyboard.....	102, 175
USB mouse will not work.....	183
USB Type A ports	175
USB Type B port	175

V

V/M button	162
VFO tuning knob	167
Voice memory keyer won't transmit	179
VOX	90

W

Waterfall and 3DSS spectrum colours	61
Waterfall to spectrum display ratio....	60
Waterfall too dark.....	178
Waterfall too light.....	178
WSJT-X CAT control problems	177
WSJT-X software COM settings	47

Y

Yaesu FC-40 antenna tuner.....	107
--------------------------------	-----

Z

Zin/SPOT button	165
-----------------------	-----